


HOURMETER

The hourmeter is a very accurate monitoring instrument to indicate the actual hours on the equipment it is installed on. Your hourmeter will operate on vehicles with 8 to 40 volt electrical system. The use of the hourmeter is very helpful in maintaining proper maintenance intervals. This can prevent costly repairs and down time.

This series hourmeter was specifically designed for use on cars, trucks, construction, machines, material handling and farm equipment. Other uses include aircraft and marine applications.

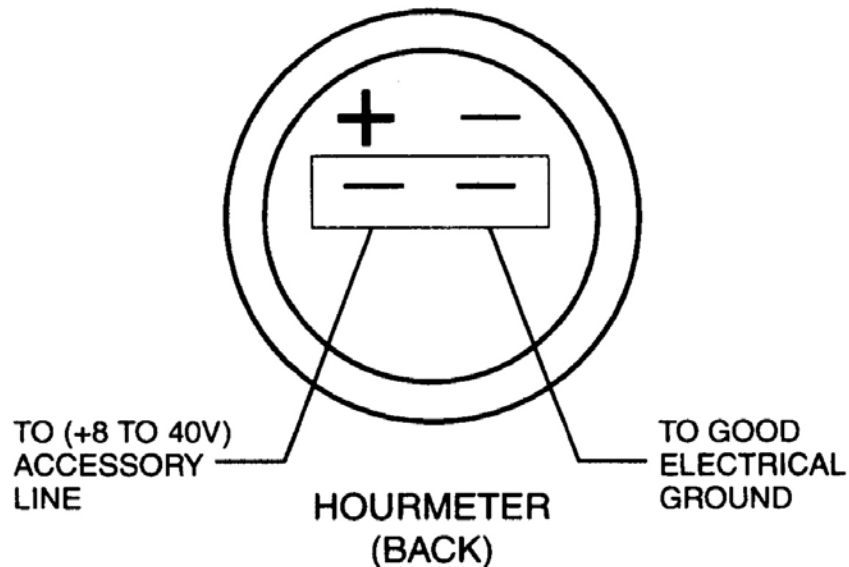

INSTALLATION INSTRUCTIONS

- (1) Connect (—) BLACK wire to a good electrical ground on the vehicle. If using a metal portion of the vehicle, make sure the paint is scraped away.
- (2) Connect (+) RED wire to an accessory line in the vehicle. This is a line that only has voltage when the ignition switch is on, i.e. radio, heater.